

# **UM195**

## **BELT-PACK TRANSMITTER**

---

---

### **OPERATING INSTRUCTIONS and trouble-shooting guide**

---

---

**LECTROSONICS, INC.**  
Rio Rancho, NM



# INTRODUCTION

Thank you for selecting the Lectrosonics UM195 belt-pack transmitter. The UM195 combines over 80 years of engineering experience with the very latest components, in a design that addresses the most demanding professional applications.

The design of the UM195 was the direct result of numerous conversations with users, staging and touring companies and dealers across the US. The specific concerns and needs brought up in these conversations led directly to the development of the operational features offered on the UM195. This is certainly not the first belt-pack transmitter ever designed, but it is definitely the most thoroughly engineered unit available.

The UM195 is a rugged, machined aluminum package with a removable, spring loaded belt clip. The input section provides a correct input tap for virtually any microphone or line level audio source. 5 Volts of bias voltage is available to power electret mics with either positive or negative bias. Level indicating LEDs are provided on the control panel to make level settings quick and accurate, without having to view the receiver. The battery compartment accepts any 9 Volt alkaline battery and makes a positive connection via self-adjusting contacts. The antenna is a detachable, locking 1/4 wavelength flexible wire that connects to a 50 Ohm port on the transmitter.

Only the UM195 transmitter is covered in this manual. Companion receivers are covered in separate manuals. The UM195 will operate with any 195 Series Lectrosonics receiver on the same frequency.

---

## TABLE OF CONTENTS

INTRODUCTION .....	1
GENERAL TECHNICAL DESCRIPTION .....	2
CONTROLS AND FUNCTIONS .....	4
BATTERY INSTALLATION .....	6
OPERATING INSTRUCTIONS .....	7
OPERATING NOTES .....	7
M195 INPUT JACK WIRING .....	8
TROUBLESHOOTING .....	9
SPECIFICATIONS AND FEATURES .....	10
SERVICE AND REPAIR .....	11
RETURNING UNITS FOR REPAIR .....	11
WARRANTY .....	Back cover

The UM195 transmitter is FCC type accepted under Part 74: 470-608 MHz; 174-216 MHz

# GENERAL TECHNICAL DESCRIPTION

The UM195 transmitters are comprised of a number of functional sub-systems as shown in the block diagram below.

The 195 system uses 75kHz wide deviation for an extremely high signal to noise ratio. The transmitter circuits are all regulated to allow full output power from the beginning (9 Volts) to the end (7 Volts) of battery life. The oscillator crystal is shock mounted to provide ruggedness. The input amplifier uses a Motorola 33078 op amp for ultra low noise operation. It is gain controlled with a wide range input compressor which cleanly limits input signal peaks over 40dB above full modulation.

Traditionally, companders have been a source of distortion in wireless microphone systems. The basic problem with conventional systems is that the attack and decay times are always a compromise. If the time constants are fast, high frequency transients will not be distorted, but this will cause low frequency distortion. If the time constants are slower, low frequency audio distortion will be low, but high frequency transients will then be distorted. The 195 system introduces an entirely new approach to solving this basic problem, called "dual-band companding."

There are actually two separate companders in the 195 system, one for high frequencies and one for low frequencies. A crossover network separates the frequency bands at 1kHz with a 6dB per octave slope, followed by separate high and low frequency companders. The attack and release times in the high frequency compander are fast enough to keep high frequency transient distortion at a low level, and the low frequency compander uses slower time constants, reducing low frequency distortion to well below that of a conventional compander.

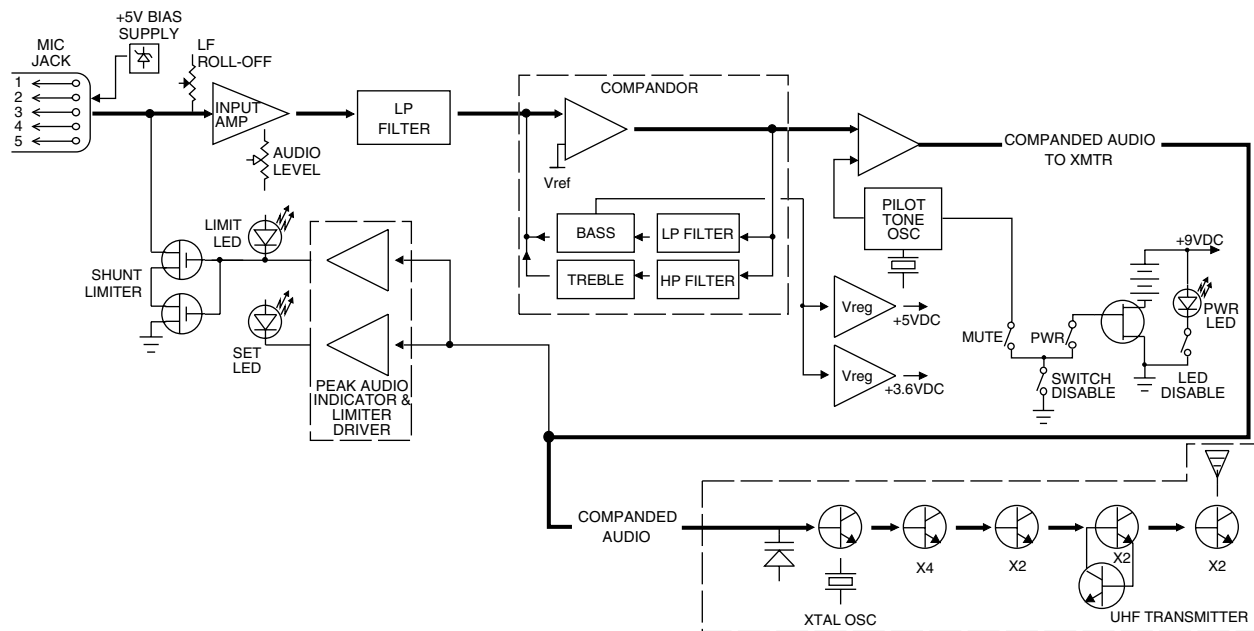


Figure 1 - UM195 Block Diagram

The signal to noise ratio of the 195 system is high enough to preclude the need for conventional pre-emphasis (HF boost) in the transmitter and de-emphasis (HF roll off) in the receiver. Pre-emphasis and de-emphasis in an FM radio system usually provides about a 10dB improvement in the signal to noise ratio of the system, but the high frequency boost in the transmitter must be removed in a purely complementary manner or else the frequency response of the original audio signal will be altered.

Pre-emphasis can also cause distortion in the IF filtering stage in a receiver. As this signal is passed through the IF filters in the receiver, distortion can be produced, most noticeable at full modulation. De-emphasis cannot be applied until the signal is converted into audio, so there is no way around this problem short of eliminating pre-emphasis altogether. Neither of these problems occur in the 195 system. The dual-band compandor in the 195 Series system essentially provides a dynamic pre-emphasis/de-emphasis function with extremely low distortion.

The 195 system utilizes an ultrasonic tone modulation of the carrier to operate the receiver squelch. This "pilot tone" consists of a 32kHz signal mixed with the audio signal following the microphone preamp, just after the compandor, to control the audio output muting of the receiver. The pilot tone is filtered out of the audio signal immediately after the detector in the receiver so that it does not influence the compandor or various gain stages. The basic benefit of the pilot tone squelch system is that the receiver will remain muted until it receives the pilot tone from the matching transmitter, even if a strong RF signal is present on the carrier frequency of the system. This is extremely important in applications such as with an automatic sound system.

75kHz deviation improves the capture ratio, signal to noise ratio and AM rejection of a wireless system dramatically, compared to the more commonly used 15kHz. 75kHz deviation is frequently used in the UHF spectrum, but it is much harder to implement at VHF frequencies. The 195 system is the first to take advantage of this wider deviation now allowed by the FCC in the VHF spectrum. Almost all other VHF wireless systems use 15kHz deviation.

High efficiency circuits throughout the design allow over 7 hours of operation on the UHF version, and over 10 hours on the VHF versions, using a single 9 Volt alkaline battery. The battery compartment is a unique mechanical design which automatically adjusts to fit any brand alkaline battery. The battery contacts are spring loaded to prevent "rattle" as the unit is handled.

The transmitter section uses a crystal stabilized main oscillator followed by a quadrupler and three doubler stages. The crystal controlled frequency is extremely stable over a wide temperature range and over time. Double tuning used in the multiplier stages provides higher attenuation of spurious emissions which, in turn, minimizes the possibility that the transmitter RF output would interfere with another transmitter/receiver system operating in the same vicinity.

At UHF frequencies, where wavelengths and antennas are shorter than VHF, a resonant dangling wire is preferred. The antenna on the UM195 consists of a flexible 1/4 wavelength wire, detachable via a twist lock connector. The impedance of this connector is 50 Ohms at UHF frequencies.

## CONTROLS AND FUNCTIONS

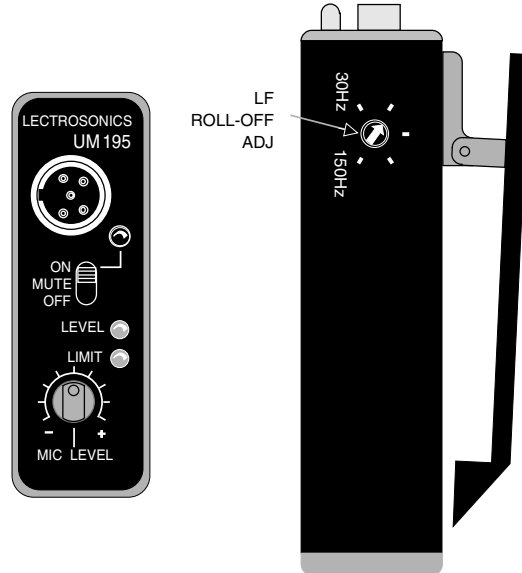


Figure 2 - UM195 Controls and Functions

### INPUT JACK

The input on the UM195 accommodates virtually every lavalier, hand-held or shotgun microphone available. Use a Switchcraft TA5F connector on the cord. **See the separate sheet titled "UM195 Input Jack Configuration" regarding the correct connections for various microphones, and other sources.**

### ON/MUTE/OFF SWITCH

Turns the battery power on and off. The center position is an "audio mute" which should be used when setting the **MIC LEVEL** control to turn off the sound from the microphone during this adjustment. Even when the switch is turned off or on abruptly, the pilot tone muting system prevents "thumps" or transients from occurring.

### "ON" LAMP

Glow brightly when the battery is good. A weak or dim lamp means that the battery is weak, and has about half an hour of operation left. If the lamp fails to light, the battery should be replaced. The power lamp should light up in both the "MUTE" and "ON" positions of the POWER/MUTE SWITCH.

The "ON" lamp is connected to a precision battery test circuit that continuously monitors battery voltage. The LED is at full brightness with a new 9 Volt alkaline battery. As the battery voltage drops during use, the LED brightness will also decrease. After about 10 hours on the VHF version (7 hours on UHF version) the battery voltage will be about 7 Volts and the LED will be completely out.

## CONTROLS AND FUNCTIONS (cont'd)

Since the internal circuits are all tightly regulated and the RF output stage has a separate discrete regulator, the transmitter will continue to operate to a battery voltage of 6.5 Volts. From 6.5 Volts to 6 Volts, the transmitter will still operate, but with degraded performance. Please note that a weak battery will sometimes light the POWER LED immediately after turn on, but will soon discharge to the point where the LED will go out, just like a flashlight with "dead" batteries.

The combination of an accurate battery condition indicator and regulation of all internal circuits provides much longer battery life, as well as consistent performance over the life of the battery.

### MODULATION LEDS

Indicate the proper setting of the MIC LEVEL control.

**LEVEL LED** -- Flickers or glows when sufficient audio is present.

**LIMIT LED** -- Lights up when the input level is high enough to cause limiting. The input limiter has a very high overload threshold (over 40 dB). Generally speaking, some limiting is desirable in normal operation to improve the signal to noise ratio of the system. The limiting action is not audible and does not create distortion. A highly trained ear would hear only the compression of the peaks in the audio signal, which is desirable with most tape recorders and many sound reinforcement systems.

### MIC LEVEL

Used to adjust the audio input level for the proper modulation.

### ANTENNA

The flexible wire antenna supplied with the transmitter is cut to 1/4 wavelength. It is removable via a twist lock connector. The 50 Ohm RF port can also be connected directly to test equipment.

### ADJUSTABLE LOW FREQUENCY ROLL-OFF

A 6dB per octave low frequency roll-off is provided in the audio section, with the -3dB point adjustable from 30Hz to 150Hz. The actual roll-off frequency will vary somewhat according to the mic capsule being used.

### THE BELT CLIP

The belt clip may be removed for special applications by removing one screw.

**USE ONLY THE SCREW THAT IS SUPPLIED**

The circuitry is tightly packed into this unit. A longer screw will permanently damage the transmitter!

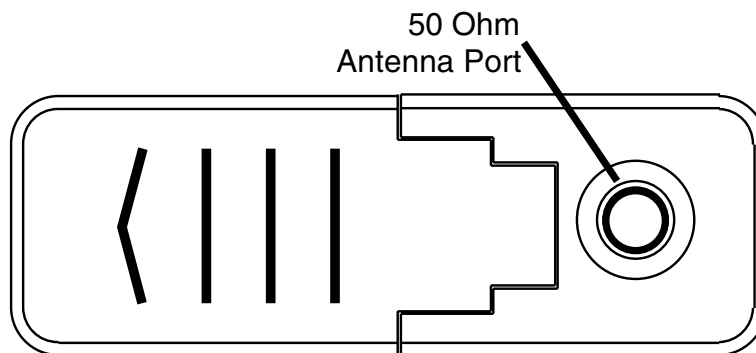
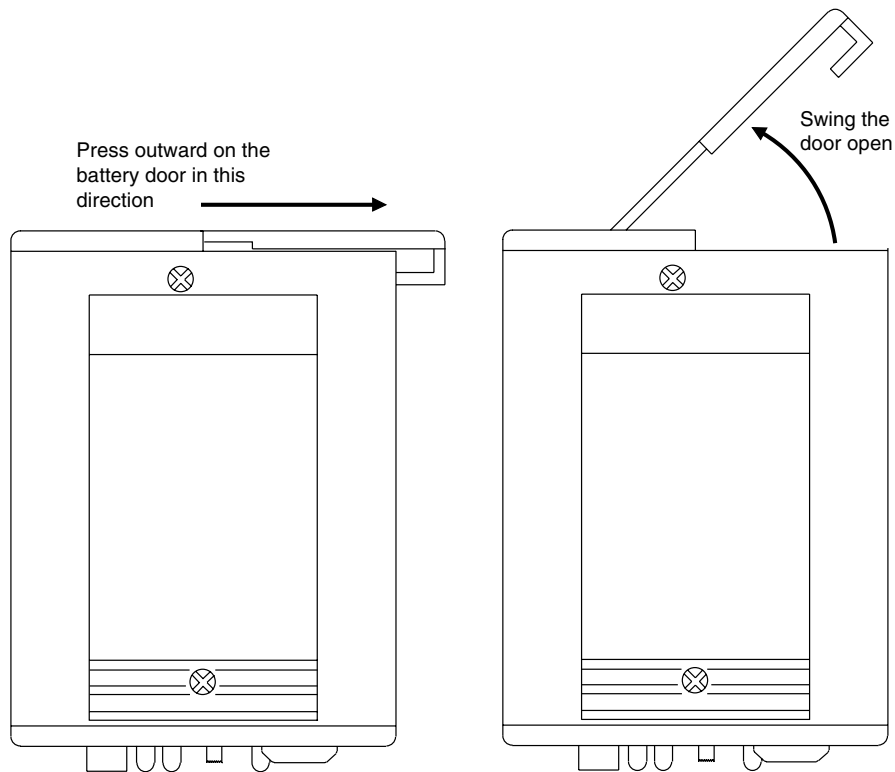


Figure 3 - UM195, UHF Antenna Location

## BATTERY INSTALLATION

The transmitter is powered by a standard alkaline 9 Volt battery. It is important that you use ONLY an ALKALINE battery for longest life. Standard zinc-carbon batteries marked "**heavy-duty**" or "**long-lasting**" are not adequate. Ni-cad rechargeable batteries will only provide 2 hours of operation, or less, and will run down quite abruptly. Alkaline batteries provide over 7 hours of operation on UHF versions and over 10 hours of operation on VHF versions. The battery status circuitry is designed for the voltage drop over the life of alkaline batteries.

To open the battery compartment, press outward on the cover door in the direction of the arrow as shown in the drawing. Only firm, sliding pressure is needed to open and close the battery door. Swing the door open and take note of the polarity marked inside showing the location of the positive (+) and negative (-) terminals. You can see the large and small contact holes inside the battery compartment with the door open.



**Figure 4 - UM195 Battery Compartment Door**

Insert the battery correctly and close the cover by pressing the door closed and across, reversing the opening procedure illustrated above. If the battery is inserted incorrectly, the door will not close. Do not force the door closed.

## OPERATING INSTRUCTIONS

- 1) Install a fresh battery according to the instructions on the previous page.
- 2) Insert the microphone plug into the input jack, aligning the pins; be sure that the connector locks in.
- 3) Attach the antenna to the jack on the bottom of the transmitter.
- 4) Turn the power switch to the "MUTE" or "ON" position on the transmitter.
- 5) Position the microphone in the location you will use in actual operation.
- 6) While speaking or singing at the same voice level that will actually be used, observe the MOD LEVEL LEDs. Adjust the MIC LEVEL control knob until the LEDs begin to light. Start at a low setting where neither LED lights as you speak. Gradually, turn the gain up until one LED lights, then the other.

The LEVEL LED lights when the audio level is about 12dB below full modulation. The LIMIT LED lights when the limiter begins to operate. There is over 40dB of limiting range without overload above the LIMIT LED, so it is normal that the LIMIT LED light up 5% to 10% of the time during use.

- 7) Once the gain has been adjusted, the transmitter audio can be turned on to make sound system level adjustments. Set the power switch to the ON position and adjust the receiver and/or sound system level as required. **Please note, there will be a delay between the moment the switch is thrown and the time when audio will actually pass through to the amplifier.** This intentional delay eliminates turn on thumps, and is controlled by the pilot tone squelch control.

## OPERATING NOTES

The MIC LEVEL control knob should not be used to control the volume of your sound system or recorder levels. This gain adjustment matches the transmitter gain with the user's voice level and microphone positioning.

If the mic level is too high -- both LEDs will light frequently or stay lit. This condition may reduce the dynamic range of the audio signal.

If the mic level is too low -- neither LED will light, or the LEVEL LED will light dimly. This condition may cause hiss and noise in the audio.

The first LED turns on 12dB below full deviation. The limiting LED turns on at full deviation and indicates that the input shunt compressor is operating. The input limiter will handle peaks over 40dB above full modulation, regardless of the gain control setting. The limiter uses a true absolute value circuit to detect both positive and negative peaks. The attack time is 5 milliseconds and the release time is 200 milliseconds. Occasional limiting is desirable, indicating that the gain is correctly set and the transmitter is fully modulated for optimum signal to noise ratio.

Different voices will usually require different settings of the MIC LEVEL control, so check this adjustment as each new person uses the system. If several different people will be using the transmitter and there is not time to make the adjustment for each individual, adjust it for the loudest voice.



# TROUBLESHOOTING

Before going through the following chart, be sure that you have a good battery in the transmitter. It is important that you follow these steps in the sequence listed.

<b>SYMPTOM</b>	<b>POSSIBLE CAUSE</b>
TRANSMITTER BATTERY LED OFF	<ol style="list-style-type: none"><li>1) Battery is inserted backwards.</li><li>2) Battery is dead.</li></ol>
NO TRANSMITTER MODULATION LEDS	<ol style="list-style-type: none"><li>1) Gain control turned all the way down.</li><li>2) Battery is in backwards. Check power LED.</li><li>3) Mic capsule is damaged or malfunctioning.</li><li>4) Mic cable damaged or mis-wired.</li></ol>
RECEIVER RF LAMP OFF	<ol style="list-style-type: none"><li>1) Transmitter not turned on.</li><li>2) Transmitter battery is dead.</li><li>3) Receiver antenna missing or improperly positioned.</li><li>4) Transmitter and receiver not on same frequency. Check labels on transmitter and receiver.</li><li>5) Operating range is too great.</li><li>6) (UHF version only) Transmitter antenna not connected</li></ol>
PILOT TONE LED ON THE RECEIVER INDICATES TRANSMITTER AUDIO IS MUTED	<ol style="list-style-type: none"><li>1) Transmitter audio muted. Make sure transmitter power/mute switch is in the "on" position.</li></ol>
NO SOUND (OR LOW SOUND LEVEL), RECEIVER MOD LEVEL LEDS ARE ON AND VU METER INDICATES AUDIO	<ol style="list-style-type: none"><li>1) Receiver output level set too low.</li><li>2) Receiver output is disconnected; cable is defective or mis-wired.</li><li>3) Sound system or recorder input is turned down.</li></ol>
DISTORTED SOUND	<ol style="list-style-type: none"><li>1) Transmitter gain (audio level) is far too high. Check mod level lamps on transmitter and receiver as it is being used. (refer to page 7 for details on gain adjustment)</li><li>2) Receiver output may be mis-matched with the sound system or recorder input. Adjust output level on receiver to the correct level for the recorder, mixer or sound system.</li><li>3) Excessive wind noise or breath "pops." Re-position microphone and/or use a larger windscreen.</li></ol>
HISS AND NOISE -- AUDIBLE DROPOUTS	<ol style="list-style-type: none"><li>1) Transmitter gain (audio level) far too low.</li><li>2) Receiver antenna missing or obstructed.</li><li>3) (UHF only) Transmitter antenna missing.</li><li>4) Operating range too great.</li></ol>
EXCESSIVE FEEDBACK	<ol style="list-style-type: none"><li>1) Transmitter gain (audio level) too high. Check gain adjustment and/or reduce receiver output level.</li><li>2) Transmitter too close to speaker system.</li><li>3) Mic is too far from user's mouth.</li></ol>

## SPECIFICATIONS AND FEATURES

<b>Operating frequencies:</b> UM195:	470 to 608 MHz
<b>RF Power output:</b> UM195:	100 mW (nominal)
<b>Pilot tone:</b>	32.768 kHz ( $\pm$ 2Hz); 5kHz deviation
<b>Frequency stability:</b>	$\pm$ .002%
<b>Deviation:</b>	$\pm$ 75 kHz (max)
<b>Spurious radiation:</b>	50 dB below carrier
<b>Equivalent input noise:</b>	-126 dBV
<b>Input level:</b>	Nominal 2 mV to 300 mV, before limiting. Greater than 50 Volts maximum, with limiting.
<b>Input impedance:</b>	Taps provided for 500, 1k, 10k Ohm
<b>Input compressor:</b>	Soft compressor, >40 dB range
<b>Gain control range:</b>	43 dB; semi-log rotary control
<b>Modulation indicators:</b>	Dual LEDs indicate modulation level 12 dB below limiting and at the onset of limiting.
<b>Controls:</b>	3 position "OFF-MUTE-ON" slide switch for noiseless turn on/turn off operation. Front panel knob adjusts audio gain.
<b>Audio Input Jack:</b>	Switchcraft 5 pin locking (TA5F)
<b>Antenna:</b> UM195:	Detachable, flexible wire supplied. 50 Ohm port allows connection to test equipment.
<b>Battery:</b>	Precision compartment auto-adjusts to accept any known alkaline 9 Volt battery. (We've tried 108 different ones!)
<b>Battery Life:</b> UM195:	7.5 Hours with alkaline 9 Volt
<b>Weight:</b>	6.3 ozs. including battery
<b>Dimensions:</b>	3.1 x 2.4 x .75 inches
<b>Emission Designator:</b> UM195:	200KF3E

## SERVICE AND REPAIR

If your system malfunctions, you should attempt to correct or isolate the trouble before concluding that the equipment needs repair. Make sure you have followed the setup procedure and operating instructions. Check out the inter-connecting cords and then go through the TROUBLESHOOTING section in the manual.

We strongly recommend that you **do not** try to repair the equipment yourself and **do not** have the local repair shop attempt anything other than the simplest repair. If the repair is more complicated than a broken wire or loose connection, send the unit to the factory for repair and service. Don't attempt to adjust any controls inside the units. Once set at the factory, the various controls and trimmers do not drift with age or vibration and never require readjustment. **There are no adjustments inside that will make a malfunctioning unit start working.**

LECTROSONICS' service department is equipped and staffed to quickly repair your equipment. In-warranty repairs are made at no charge in accordance with the terms of the warranty. Out of warranty repairs are charged at a modest flat rate plus parts and shipping. Since it takes almost as much time and effort to determine what is wrong as it does to make the repair, there is a charge for an exact quotation. We will be happy to quote approximate charges by phone for out of warranty repairs.

## RETURNING UNITS FOR REPAIR

You will save yourself time and trouble if you will follow the steps below:

- A. DO NOT return equipment to the factory for repair without first contacting us by letter or by phone. We need to know the nature of the problem, the model number and the serial number of the equipment. We also need a phone number where you can be reached 8 am to 4 pm (Mountain Standard Time).
- B. After receiving your request, we will issue you a return authorization number (R.A.). This number will help speed your repair through our receiving and repair departments. The return authorization number must be clearly shown on the outside of the shipping container.
- C. Pack the equipment carefully and ship to us, shipping costs prepaid. If necessary, we can provide you with the proper packing materials. UPS is usually the best way to ship the units. Heavy units should be "double-boxed" for safe transport.
- D. We also strongly recommend that you insure the equipment, since we cannot be responsible for loss of or damage to equipment that you ship. Of course, we insure the equipment when we ship it back to you.

Mailing address:  
Lectrosonics, Inc.  
PO Box 15900  
Rio Rancho, NM 87174  
USA

Shipping address:  
Lectrosonics, Inc.  
581 Laser Rd.  
Rio Rancho, NM 87124  
USA

Telephones:  
(505) 892-4501  
(800) 821-1121  
FAX: (505) 892-6243

**World Wide Web:** <http://www.lectrosonics.com>

**email:** [sales@lectrosonics.com](mailto:sales@lectrosonics.com)

## **LIMITED ONE YEAR WARRANTY**

The equipment is warranted for one year from date of purchase against defects in materials or workmanship provided it was purchased from an authorized dealer. This warranty does not cover equipment which has been abused or damaged by careless handling or shipping. This warranty does not apply to used or demonstrator equipment.

Should any defect develop, we will, at our option, repair or replace any defective parts without charge for either parts or labor. If we cannot correct the defect in your equipment, we will replace it at no charge with a similar new item. We will pay for the cost of returning your merchandise to you.

This warranty applies only to items returned to us, shipping costs prepaid, within one year from the date of purchase.

This warranty gives you specific legal rights. You may have additional legal rights which vary from state to state.

**LECTROSONICS, INC.**

---

**581 LASER ROAD  
RIO RANCHO, NM 87124 USA**

July 6, 1999